IMPORTANT!

Safety Instructions

All Operators Must Read These Instructions Before Use

Any electrical appliance can be dangerous if used incorrectly. Some of the safety precautions given in this manual apply generally to many appliances. Other warnings are specific to the use of this tree stand.

You and any other operator of this rotating tree stand must read, understand and follow these instructions in their entirety, and should re-read them at the start of each holiday season. Failure to follow any of these instructions may result in ELECTRIC SHOCK, FIRE and/or serious PERSONAL INJURY.

General Safety WARNINGS!

Notice the personal safety alert symbol ⚠ used in this manual to draw your attention to a WARNING given along with the particular operating instruction. This means that an operation requires special ATTENTION, CAUTION and AWARENESS.

1. This tree stand is for **indoor seasonal** use for artificial trees only. Do not install on a permanent basis or use for commercial purposes.
2. Do not use this product for other than its intended use.
3. Keep tree stand away from all heat sources including gas and electric heaters, fireplaces, and candles.
4. Use the electric cord safely.
   - **A.** Electric plugs must match the outlet. Never modify the plug in any way. Unmodified plugs and matching outlets will reduce the risk of electric shock.
   - **B.** Do not use with an extension cord unless the plug can be fully inserted.
   - **C.** Do not abuse the cord. Keep cord away from heat sources, oil and sharp edges.
   - **D.** Do not place the cord in high traffic areas of your home, or close doors or windows on the cord.
   - **E.** Never carry the tree stand by its cord or yank the cord to disconnect it from electrical outlet.
   - **F.** Replace or properly repair damaged cords. If cord is damaged in any manner while plugged in, pull cord from wall receptacle.
   - **G.** Do not secure the cord with staples or nails, or place on sharp hooks or nails, since this may damage the cord and increase the risk of electric shock.
   - **H.** Turn off the power switch and disconnect the cord before decorating your tree or when leaving the tree stand unattended.
   - **I.** Contact with water while operating the tree stand can result in electric shock and serious personal injury. Do not handle the plug or the appliance with wet hands or while standing in water.
5. **WARNING** ⚠ Keep out of reach of small children. This product is not a toy. To avoid risk of electric shock, fire, and serious bodily injury, do not play with tree stand or allow access to small children or unauthorized users.
6. Moving parts present risks. Keep your face, hair, clothing, hands and feet away from the rotating spindle. Shut off and disconnect cord before touching any moving parts.
7. Make sure the tree can rotate freely without any obstructions, such as walls curtains, lamp cords, or furniture. If the tree's rotation is obstructed, you will hear a clicking sound every fifteen seconds, which will stop once the obstructing object is removed.
8. Keep tree skirts, tinsel, garland, and other holiday decorations away from rotating spindle.
9. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug. It is acceptable to omit this item if the product does not employ a polarized plug.
10. Do not cover the product with cloth, paper or any material not part of the product when in use.
11. Unplug the product when leaving the house, or when retiring for the night, or if left unattended.

© 2012 by Snow Joe, LLC
All rights reserved. Original instructions.

SAVE THESE INSTRUCTIONS

Assembly

CAUTION

Inspect wiring, which, if damaged during shipping, may cause serious bodily injury during equipment use. If any damage is seen or suspected, do not assemble. Instead, contact Snow Joe Customer Service (1-866-766-9563) for assistance.

Handle with care during assembly so that electrical wiring does not become damaged.

Getting Started

1. Remove the tree stand from the box and familiarize yourself with the unit (Fig. 1).

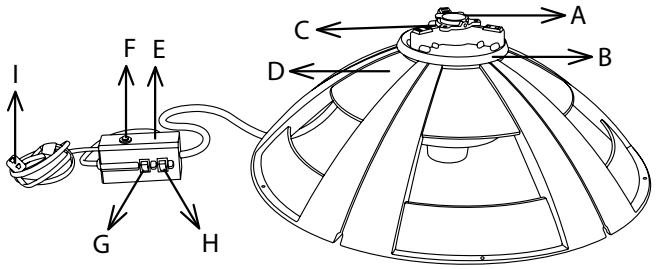

Figure 1

- **A.** Spindle Screw
- **B.** Rotaing Power Base
- **C.** Tree Base Collar
- **D.** Tree Stand Base
- **E.** Switch Box
- **F.** Reset Switch
- **G.** Light Switch
- **H.** Rotation Switch
- **I.** Power Cord

2. Inspect the stand carefully for shipping damage. If damage is seen or suspected (such as damaged wire insulation, cracks in the enclosures, loose connections or exposed copper wire), do not assemble. Instead, contact Snow Joe Customer Service for assistance.

Tree Installation

1. Locate the tree base collar in the parts bag and slide the collar onto the tree pole (Fig. 2). Do not attempt to insert the tree pole into the collar while the collar is screwed into the tree stand.

Note: This tree stand will accommodate standard size tree poles up to 1.25 in. (3.18 cm) in diameter. If the collar will not slip onto the tree pole, this indicates that your tree pole is not a standard size.

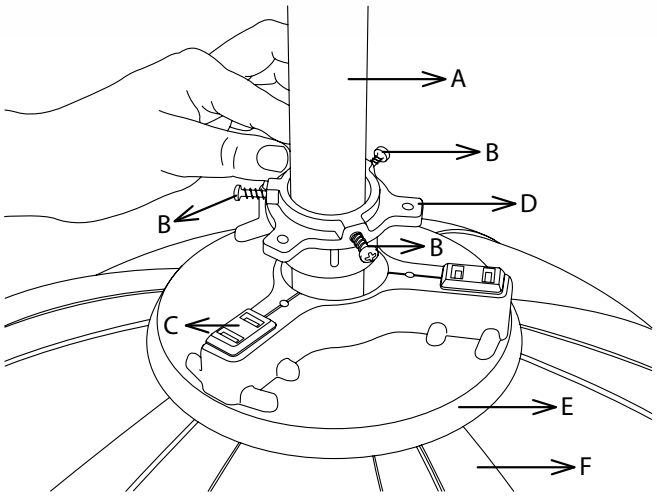

Figure 2

- **A.** Artificial Tree Pole
- **B.** Spindle Screws (x3)
- **C.** Receptacle
- **D.** Tree Base Collar
- **E.** Rotating Power Base
- **F.** Tree Stand Base

2. Insert the tree pole into the stand.

Note: For poles with pointed ends (crimps), carefully turn the pole into the spindle until the crimp hooks onto the rib inside the spindle (Fig. 3).

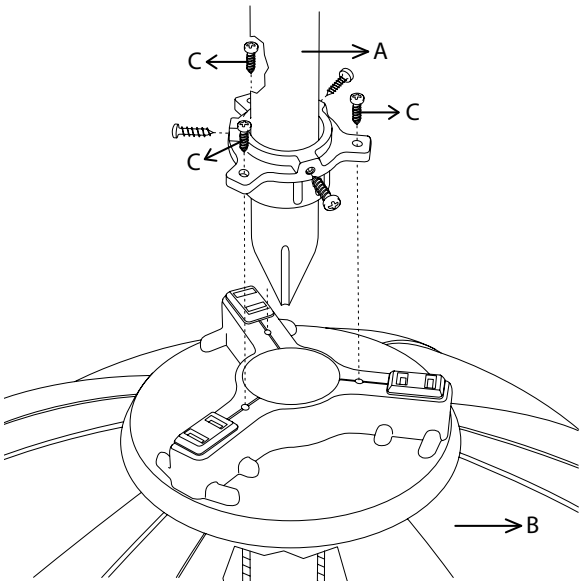

Figure 3

- **A.** Artificial Tree Pole
- **B.** Tree Stand Base
- **C.** Collar Screws (x3)

3. Slide the collar down the pole and secure it to the tree stand by fastening the three (3) collar screws (Fig. 4).

   IMPORTANT: Do not over-tighten the screws, since this can damage the tree stand.

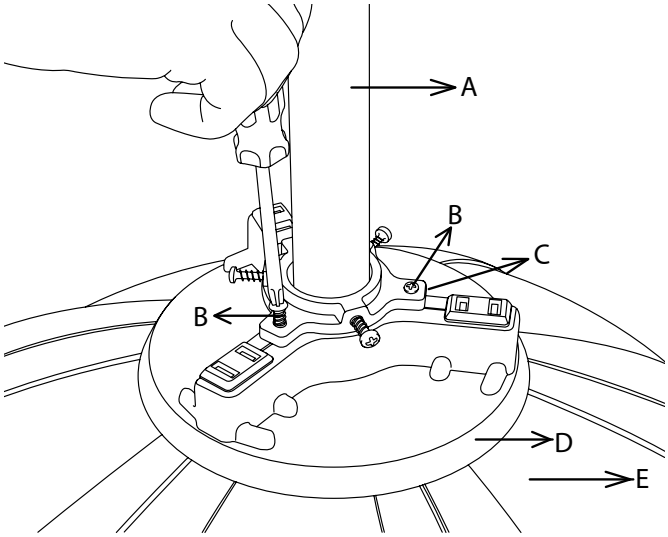

Figure 4

- **A.** Artificial Tree Pole
- **B.** Collar Screws (x3)
- **C.** Tree Base Collar
- **D.** Rotating Power Base
- **E.** Tree Stand Base

4. Tighten all three (3) spindle screws to secure the tree in a stable, upright position (Fig. 5).

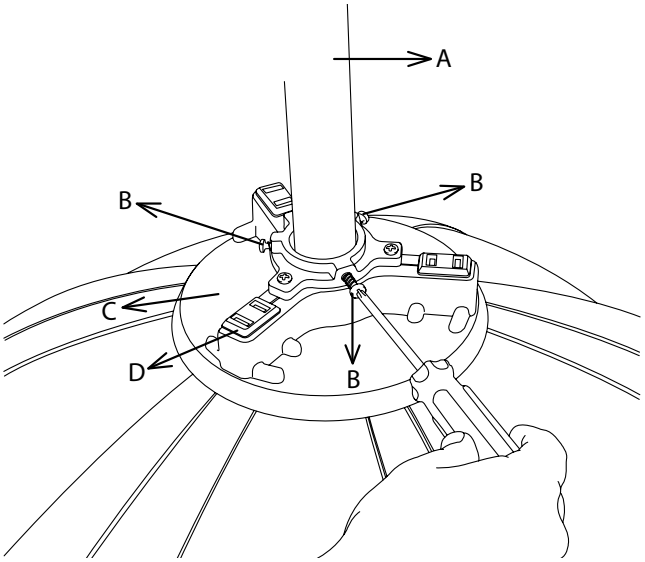

Figure 5

- **A.** Artificial Tree Pole
- **B.** Spindle Screws (x3)
- **C.** Rotating Power Base
- **D.** Receptacle

5. Make sure the tree fits securely inside the collar before turning on the tree stand. Once the tree is installed inside the stand, do not rock it back and forth since this can damage the stand. If the tree does not fit properly even after tightening the collar screws, please contact Snow Joe Customer Service at 1-866-766-9563.

Operation

WARNING

Electric shock can cause SEVERE INJURY or DEATH. Heed these warnings:

- Do not allow any part of tree stand to make contact with water while powered on. If the stand becomes wet while turned off, wipe dry before starting.
- Do not touch the tree stand or its plug with wet hands or while standing in water.
- Do not use with an extension cord unless the plug can be fully inserted.

1. The electric cord has a polarized plug (Fig. 6), with one prong slightly longer and wider than the other. This plug can be inserted only one way into a polarized outlet. If the plug does not fit properly in the outlet, unplug it from the outlet and insert it in the reverse direction. If it still does not fit, seek the assistance of a qualified electrician.

   Note: If using an extension cord with this unit, make sure that the original plug fits snugly into the extension cord slots, which are likewise polarized.

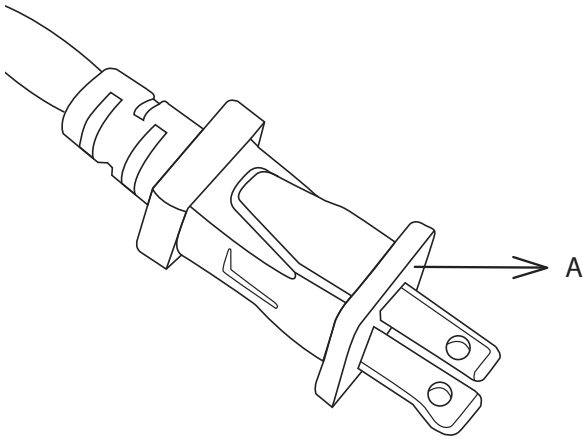

Figure 6

- **A.** Electrical Cord

⚠ WARNING ⚠

Damaged electric cords present risk of fire, electrical shock and serious bodily injury.

- Before operating this tree stand, carefully examine its electrical cord. If the cord is damaged, do not use this tree stand. Instead, promptly inform the dealer where you bought the tree stand or contact Snow Joe Customer Service (1-866-766-9563).
- Before lighting your tree, carefully inspect the light strings for frayed wires, damaged sockets and worn plugs. If any damage is seen or suspected, do not use.

2. Before assembling and decorating your tree, check to make sure that the tree stand works properly by plugging a light set into one of the three electrical receptacles located on the spindle (Fig. 7). Flip the LIGHT and ROTATE switches located on the control box to the ON position (Fig. 8). The lights should light up and the spindle should start rotating. Flipping the LIGHT and ROTATE switches to the OFF position should likewise turn off these respective functions.

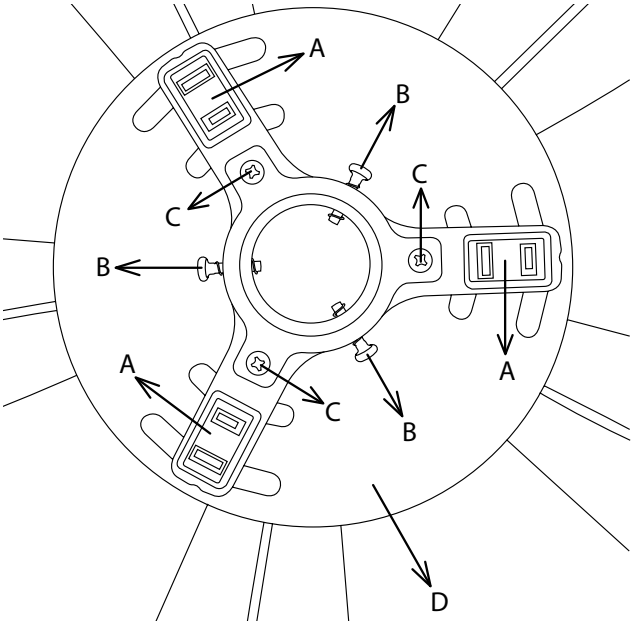

Figure 7

A. Receptacle
B. Spindle Screws (x3)
C. Collar Screws (x3)
D. Rotating Power Base

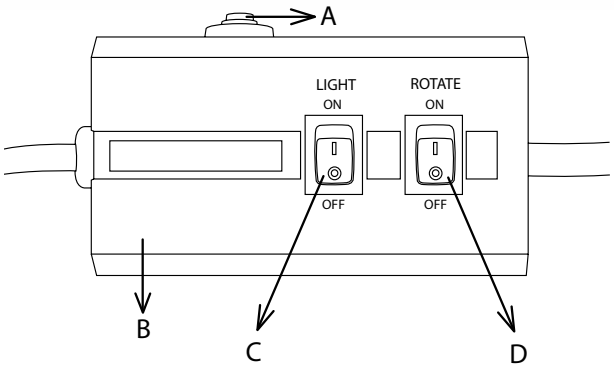

Figure 8

A. Reset Switch
B. Switch Box
C. Light Switch
D. Rotation Switch

3. Assemble, light and decorate your tree.

⚠ WARNING ⚠

Carefully read and follow all manufacturers' instructions for the light sets, extension cords, trees and decorations you wish to use.

- Use only UL or ETL listed light sets and extension cords.
- Inspect all light sets for wear and damage. If any damage is seen or suspected, do not use.

4. This tree stand is rated for a maximum of 8 Amps (960 Watts) at 120 Volts, AC 60 Hz. This typically corresponds to 2,400 lights for 50 or 100 miniature light sets; 1,680 lights for 35 or 70 miniature light sets. Double check manufacturer's label on light sets before plugging them into the tree stand.

Note: Plug a maximum of 3 miniature light sets together end-to-end and a maximum of 2 cool burn C7 light sets together end-to-end. Use a UL listed extension cord if necessary to reach maximum number of lights.

5. Notice the circuit protector button on the control box of your tree stand (Fig. 9). This button will pop if there is an overload or short circuit situation. If this occurs, unplug the tree stand and any light sets plugged into the tree stand's electric outlets. Push the circuit protector button to reset. If the circuit protector pops again, this may indicate a short circuit. Contact Snow Joe Customer Service (1-866-766-9563) for service or replacement. If the button does not pop again, there may be an overload condition. Check to see that the number of light sets plugged into the stand does not exceed the 10 amp maximum allowed.

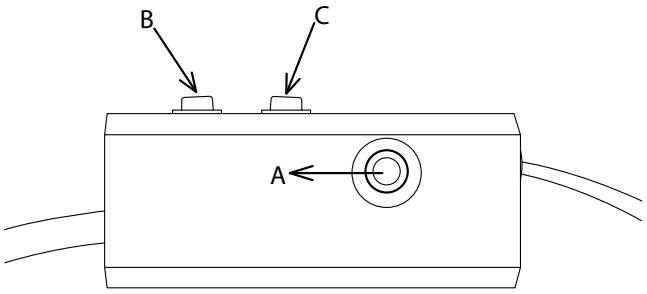

Figure 9

A. Reset Switch
B. Rotating Switch
C. Light Switch

Maintenance and Storage

1. Carefully remove the tree pole from the stand. Do not place unnecessary stress on the stand, control box or wires.
2. Thoroughly inspect the stand for any damaged or worn parts. Check for cracks in the enclosures, loose connections, or electric cord damage. If damage is seen or suspected, contact Snow Joe Customer Service (1-866-766-9563) or your authorized Snow Joe dealer. Do not attempt to service or repair the tree stand yourself.
3. Store the tree stand safely in its original box and prevent access by small children or unauthorized users.
4. Keep away from excessive heat and humidity.

Service and Support

If your Snow Joe Holiday rotating tree stand requires service or maintenance, please contact Snow Joe Customer Service (1-866-766-9563) for assistance.

Model and Serial Numbers

When contacting Snow Joe or arranging service from an authorized dealer, you will need to provide the model and serial numbers, which can be found on the bottom of your unit. Copy these numbers into the space provided below.

Record the following numbers from the housing or handle of your new product:

Model #:
H | 0 | 9 | 2

Serial #:

FCC Rules

WARNING! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radiol TV technician for help.

A Two-Year Full Warranty for residential use in the United States and Canada

General Conditions:

Snow Joe, LLC warrants this product to the original purchaser for two years against defects in material or workmanship when used for normal residential purposes. Snow Joe, LLC will repair any defect in material or workmanship, and repair or replace any defective part, subject to the conditions, limitations, and exclusions set forth herein. Such repair or parts replacement will be free from charge to the original purchaser except noted below.

The duration of the warranty applies only if the product is put to personal use around the household or residence. If the product is put to any business use, commercial or industrial, then the duration of this warranty is 90 days from the date of original purchase. If any product is rented or leased, the duration of the warranty is 90 days from the date of original purchase.

It is the owner's responsibility to perform correctly all maintenance, and minor adjustments explained in the owner's manual.

Electric Products:

To obtain a replacement electric powered unit or repair the existing electric powered unit, you must return the complete unit and postage prepaid to: **Snow Joe Return Center, 86 Executive Avenue, Edison, NJ 08817.**

Gasoline / Battery Products:

Limitations

- Batteries are warranted only for the period of 12 months after the date of purchase on a prorated basis. Rechargeable batteries will be replaced free from charge during the first 90 days. After the initial 90 days, batteries will be replaced at prorated cost to the customer
- Idlers, cables, and electrical components are warranted to the original purchaser for use at household or residence for a period of two years

Exclusions

- Snow Joe brand engines are covered under this warranty. All other engines and engine accessories are covered only by the engine manufacturer's warranty and are not covered by this warranty
- Parts used that are not genuine Snow Joe parts are not covered by this warranty
- Damages resulting from misuse, alteration, improper assembly, improper adjustment, neglect, or accident which requires repair is not covered under this warranty
- Belts, augers, and tines are not covered under warranty – belts, augers, and tines wear out and can be purchased at www.snowjoe.com or by calling 1-866-766-9563

Snow Joe, LLC may from time to time change the design of its products. Nothing contained in this warranty shall be construed as obligating Snow Joe, LLC to incorporate such design changes into previously manufactured products, nor shall such changes be construed as an admission that previous designs were defective.

This warranty is intended to cover product defects only. Snow Joe, LLC is not liable for indirect, incidental, or consequential damages in connection with the use of the Snow Joe Products covered by this warranty. This warranty does not cover any cost or expense incurred by the purchaser in providing substitute equipment or service during reasonable periods of malfunction or non-use of this product, while waiting for completion of repairs under this warranty. Some states do not allow exclusions of incidental or consequential damages, so the above exclusions may not apply in all states. This warranty may gives you specific legal rights in your state.

If you wish to contact Snow Joe, please direct inquiries to the:
Customer Service Department
Snow Joe Center
86 Executive Avenue
Edison, NJ 08817

Customers who have purchased Snow Joe products exported from the United States and Canada should contact their Snow Joe Distributor (Dealer) to obtain information applicable for your country, province, or state. If for any reason, you are not satisfied with the distributor's service, or if you have difficulty obtaining warranty information, contact your Snow Joe seller. If in the event your efforts are unsatisfactory, please write to the Snow Joe Center at the above address.

If you have any questions about your product warranty, please call 1-866-SNOW-JOE or visit us online at www.snowjoe.com.